READ AND SAVE THESE INSTRUCTIONS

Raindance HC-1993-OS WET Patio Fan HC-1993-OS

Thank you for purchasing a Gulf Coast Fans, Inc. product. It will provide years of cost efficient comfort. With over a decade of experience in ensuring quality workmanship at an affordable price, we stand behind our product and we hope you will too.

IMPORTANT PRECAUTIONS

- **1** Read these instructions carefully before you start.
- 2 Turn off the power at the source before installation, servicing, or cleaning.
- **3** WARNING--TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THIS FAN WITH ANY SOLID STATE SPEED CONTROL DEVICE. USE ONLY GULF COAST CONTROLS.
- **4** WARNING--TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE IRONS WHEN INSTALLING ON BLADES, BALANCING THE BLADES, OR CLEANING THE FAN. DO NOT INSERT FOREIGN OBJECTS IN BETWEEN ROTATING FAN BLADES.
- 5 WARNING--TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY, MOUNT FAN TO AN OUTLET BOX MARKED "ACCEPTABLE FOR FAN SUPPORT" AND USE MOUNTING SCREWS PROVIDED WITH THE OUTLET BOX.
- 6 If you don't feel comfortable hanging and wiring this fan, we recommend that you hire a qualified electrician to install it.
- 7 All wiring and electrical connections must meet the National Electrical Code and any local codes that may apply.
- 8 After installation, fan blades must be at least seven (7) feet from the floor.

To begin with, the site of installation must be clear of any obstructions. Walls, cabinet or cupboard doors, and AC/heating vents (strong air currents will cause fan to wobble) are common obstructions. Also, you will need a securely mounted outlet box that is listed for fan support. You may also mount fan directly to a ceiling joist, but you must use a Ceiling Fan Swag Kit to provide power.

The only tools you will need are : A medium Phillips screwdriver, common sense, and a little caution.

- Screw Package A. Remove all parts from plastic bags, including the screw package. 2 - 2" Wood Screws 2 - 3/8" Star Washers 2 - 1/2" Flat Washers 16 - 5/16" Blade Screws 16 - 9/16" Washers CANOPY **BALL &** DOWNROD W/RUBBER GASKET, THREADED PIN, 11-1/4" Motor Screws 6 0 WASHERS & 3 - Large Wirenuts ACORN NUT BLADE 200000000 ARMS 1- Pull Chain Knob HANGING BRACKET w/2 CANOPY SCREWS \cap r 6111COA S B. Remove the two-piece styrofoam shipping collar SHIPPING COLLAR from under the fan's switch cup. If present, remove and discard the three (to five) black shipping blocks FIG. 1. from the face of the motor. See Fig 1 MOTOR FACE ß SHIPPING C. Place the motor, switch cup FIG.2 SCREW(S) BLOCKS down, in top styrofoam. Loosen the set screw(s) in the coupler on the top of the motor housing Q. 0 FIG. 3 See Fig. 2. THREADED PIN D. Remove the Threaded Pin from the Downrod. See Fig. 3 II. Preliminary Assembly. PIN SCREW A.1. Take the ball & downrod and loosen the set σ screw in the ball. Remove the pin and the ball from the downrod. (If you have a longer downrod, use it now.) See Fig. 4 FIG.4 Feed the three wires from the top of the fan through the downrod and thread the downrod into the coupler. Align the holes in the downrod with the holes in the coupler. See Fig. 5 0 (qeg 10000 Q Insert the threaded pin with half the washers set. Secure. **FIG.5** with the remaining washers and acorn nut. Tighten it and 觉 **FIG.6** the set screw(s). 4. Place the canopy around the downrod. Slide the ball onto the downrod and replace pin. See Fig. 6 5. Raise the ball so that the pin is in the slot and tighten the set screw. See Fig. 7 FIG.7 6. Make sure all of the screws are tight. At this time you may want to shorten the wires from the fan to 6" from the ball. This helps when you tuck the wires into outlet box. Screw 1 Washer B. Snap together blade and blade iron. Note the side of the blade you want to show. Using the 3/16"-32x5/16" blade screws and 9/16" washers, three of each per blade, secure blade to blade iron. Repeat this procedure with the rest of the blades. You will have at least one screw and one washer left over; these are
- I. Inventory the parts. Remove all of the parts from the top styrofoam and remove the styrofoam. Use this top piece to support the fan during preliminary assembly.

FIG.8


Page 2

spares. Be sure all of the screws are tight. Fig. 8

WARNING - To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury Mount Fan To Outlet Box Marked Acceptable For Fan Support And Use The Mounting Screws Provided With The Outlet Box

This model is design for wet locations, however the top of the canopy should not be open to the elements. Be sure the top of the canopy is covered by the outdoor outlet box or some by method of weather-proofing.

- C.1. Take the hanging bracket and secure it to the outlet box (marked Acceptable For Fan Support) using the mounting screws provided with the outlet box. Tighten them evenly.
 - 2. Remove one canopy screw (also Fig 9) and loosen the other. Make sure all of the wires are accessible and are not being pinched. Also, make sure the bracket doesn't wobble.

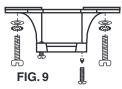

III. Hanging the fan motor

Holding the fan carefully, lift it up to hanging bracket. Place the ball into cradle of the bracket. Turn the entire motor assembly until it locks into place. The tab on the bracket must be in the groove in the ball. See Fig 10. Make sure the wires are not being pinched.

IV. Wiring methods and instructions.

There are three common wiring methods; choose the one best suited to your needs. Keep in mind, the supply wire colors may vary. (The wire colors in parentheses are commonly found in existing structures.) Use the large orange wirenuts to make the connections. It is a good idea to wire the blue light kit wire now, even if you don't have a light kit. It may save you some trouble in the future.



- 1. Green ground wires to outlet box ground (bare)
- 2. Black and blue wires from fan to hot supply (black)

FROM LIGHT CONTROL


FROM FAN CONTROL

SUPPLY NEUTRAL

- 3. White wire from fan to neutral supply (white)
- See Fig 11.

FIG. 12

SUPPLY HOT

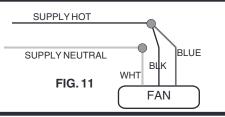

B. Wall control for both fan and light kit (Read the instructions for the wall control first.)

- 1. Green ground wires to outlet box ground. (bare)
- 2. Black wire from fan to (black) wire from fan control.
- 3. Blue wire from fan to (red) wire from light control.4. White wire from fan to neutral supply. (white)
- FROM LIGHT CONTROL C. Pull chain operation of fan - Wall control for the light. FROM SUPPLY HOT 1. Green ground wires to outlet box ground. (bare) SUPPLY NEUTRAL 2. Black wire from fan to hot supply. (black) BLUE BLK 3. Blue wire from fan to (red) wire from wall control. **FIG.13** WHT 4. White wire from fan to neutral supply. (white) 5 See Fig 13. FAN SUPPLY HOT

See Fig 12.

BLUE

BIK


FAN

WHT

Now tuck the wires and wirenuts carefully into outlet box. Make sure the Green and White wires are tucked into one side of the box and the Black and Blue wires are tucked into the other side of the box. Make sure wirenuts remain tightly on connections.

If you have a Gulf Coast Remote Control, fan should be wired according to method A. Method B can be used with two separate controls for the fan and light, or with a combination wall control, such as a 423L Gulf Coast control.

- V. With the motor in place and the wires out of the way, slide the canopy up to the hanging bracket. The canopy screw in the bracket will come through the large end of the key slot in the canopy. Fig. 14. Turn the canopy slightly, counter-clockwise, to hold in place, and insert remaining canopy screw. Tighten the screws.
- VI. To avoid scratching the switch cup or damaging the motor, do not run the fan without blades. So, the next step is to mount the blade assemblies on the motor. The easiest way to do this is to insert a motor screw into one hole on the base of the blade iron; hold it in place with a screwdriver and lift blade assembly into place. Fig. 15. Start this screw in an appropriate hole in motor. Now insert another into the other hole and tighten both screws. Repeat this with the rest of the blade assemblies, and retighten all of the screws.

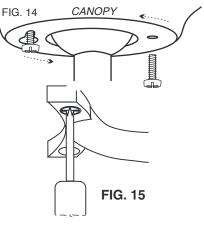

VII. Turn the power supply back on and prepare to be comfortable.

The first pull of the chain will give you high speed. The second is medium speed, and the third is low speed. Once again will turn it off. With the reverse switch in the down position, the fan will provide downward air movement and positive air flow to cool you in the hot season. In the up position, air movement is upward and will bring heat trapped at the ceiling, down around the rooms walls, warming you in the cold season.

CAUTION - DO NOT ATTEMPT TO REVERSE THE FAN WHILE BLADES ARE IN MOTION

